



Technical Bulletin 131

Version 1.0


January 2013

Tiger and Select inlet seal re-design

Here at Ion Science, we strive to manufacture instruments of the highest quality and are committed in making on-going improvements to ensure our customers receive products of the best possible standard.

This has resulted in a slight change to the 'Inlet/Outlet seal' of the PhoCheck Tiger and Tiger Select products. (See diagram to the right)

The seals have been lengthened slightly to improve their ability to seal after being fitted for extended periods, and ensure improved seal integrity is maintained after the sensor cover is removed and refitted.

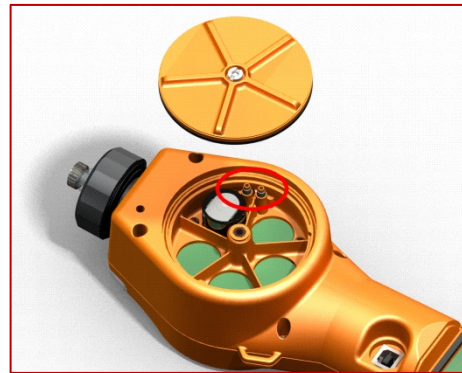

Please note that the seals are a direct replacement to the older style and are now fitted to all PhoCheck Tiger and Tiger Select instruments as standard. The seals can be retrofitted to any PhoCheck Tiger or Tiger Select, no modification to the instrument is necessary.

The seals can be purchased using the following part number code:-

Inlet/Outlet seal: 861215

For more information please contact Ion Science:

Tel: +44 (0)1763 208503

Email: info@ionscience.com

www.ionscience.com

